


# M78 TRIGGER REPLACEMENT


- ① MACHINE SHOULD BE IN START POSITION, WITH GUARD IN PLACE AND AIR SUPPLY ON.
- ② SET STRIP LENGTH TO .500
- ③ DISCONNECT AIR SUPPLY, AND REMOVE GUARD.

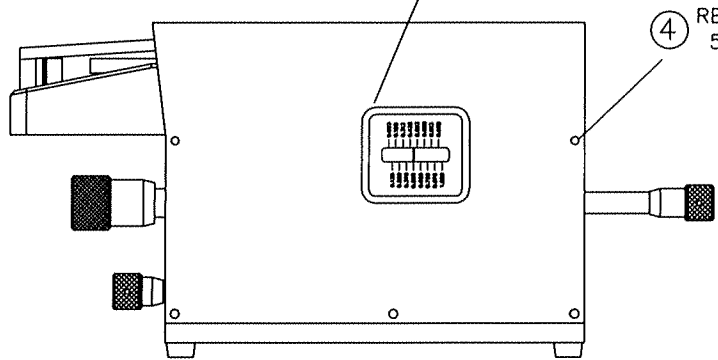

- ④ REMOVE COVER (10, 6-32 SCREWS )  
5/64 HEX WRENCH

- ⑤ REMOVE TRIGGER AIR LINE.

- ⑥ REMOVE BLADES.

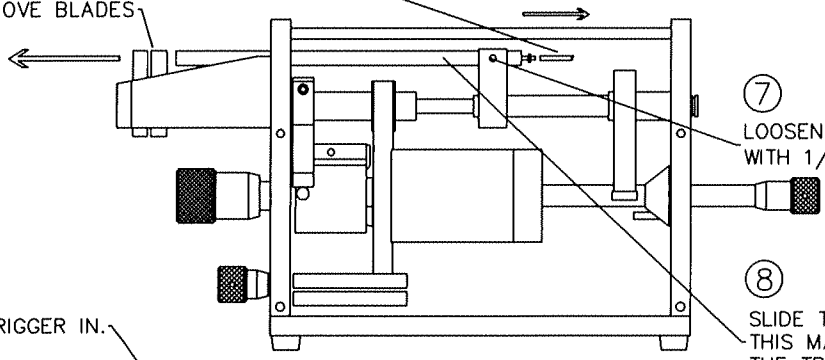


- ⑦ LOOSEN TRIGGER SET SCREW (FAR SIDE)  
WITH 1/16 HEX WRENCH

- ⑧ SLIDE TRIGGER OUT,  
THIS MAY REQUIRE TWISTING  
THE TRIGGER TUBE.

- ⑨ SLIDE TRIGGER IN.

- ⑩ INSTALL BLADES.

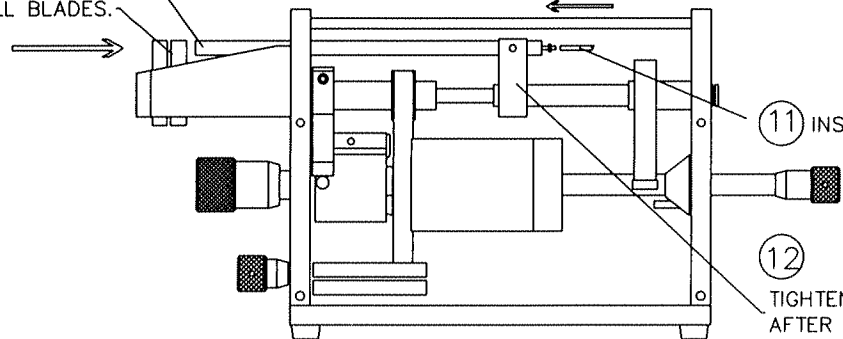

- ⑪ INSTALL TRIGGER AIR LINE

- ⑫ (FAR SIDE)  
TIGHTEN TRIGGER SET SCREW WITH 1/16 HEX WRENCH  
AFTER TRIGGER IS SET TO DIMENSION, (SEE BELOW)

- ⑬ CONNECT AIR SUPPLY, INSTALL GUARD, MOVE TRIGGER TO .500,  
TIGHTEN SET SCREW. TEST WITH WIRE. ADJUST AS NEEDED.

INSTALL COVER AND ALL SCREWS.

